

# Konyks Priska Max 3

```
{
  "vendor": "Tuya",
  "bDetailed": "0",
  "name": "Konyks Priska Max 3",
  "model": "BK7231T + BL0937",
  "chip": "BK7231T",
  "board": "",
  "flags": "1024",
  "keywords": [
    "BL0937",
    "fr"
  ],
  "pins": {
    "6": "LED_n;1",
    "26": "Rel;1"
  },
  "command": "startDriver BL0937",
  "image": "https://obrazki.elektroda.pl/YOUR_IMAGE.jpg",
  "wiki": "https://www.elektroda.com/rtvforum/topic_YOUR_TOPIC.html"
}
```



Le flash demande une alimentation externe 3.3V

---

Revision #2

Created 2026-04-12 15:24:47 UTC by Matthieu

Updated 2026-04-12 16:44:40 UTC by Matthieu